



YOUR CELL PHONE



INSERT MEMORY CARD

The phone is a Dual mobile phone allowing you to use the facility of two networks.

To insert USIM/SIM card(s):

1. Switch off the mobile phone and remove the rear cover and battery.
2. Insert the USIM/SIM card correctly in the card slot(s).
3. Finally insert the battery and replace the rear cover of the mobile phone.
4. To manage USIM/SIM cards [Settings]-[Wireless & Networks]-[SIM management].

INSERT MEMORY CARD

1. Power off the mobile phone, then remove the rear cover and battery.
2. Insert the memory card into the slot.
3. Finally insert the battery and the rear cover of the mobile phone.

With this device use only compatible, certified in EU, microSD/microSDHC memory cards. Incompatible memory cards may damage the card or the device and corrupt the data stored in the card.

USING THE TOUCH SCREEN

You can use the touch screen in the following ways: **Touch:** acts on items on the screen, such as application and settings icons, to type letters and symbols using the onscreen keyboard, or to press onscreen buttons.

Touch and hold: touch and hold an item on the screen until an action occurs.

Drag: touch and hold an item and move your finger on the screen until you reach the target position.

Swipe or slide: quickly slide your finger across the surface of the screen, (without dragging an item). For example, slide the screen up or down to scroll a list.

Double-tap: tap quickly twice on a webpage, map, or other screen to zoom. For example, double-tap a section of a webpage in Browser to zoom that section to fit the width of the screen. You can also double-tap to control the Camera zoom, in Maps, and in other applications.

Pinch: in some applications you can zoom in and out by placing two fingers on the screen at once and pinching them together (to zoom out) or spreading them apart (to zoom in).

Rotate the screen: on most screens, the orientation of the screen changes as you rotate it. You can turn this feature on and off.

USING THE PHONE’S BUTTONS

The phone’s buttons and soft buttons offers a lot of functions and shortcuts.

Menu key. Press: Opens a context menu related with current screen or Application.

Home key. Press: Opens the Home screen. Press and hold: Opens recently used applications.

Back key. Press: Opens the previous screen you were working on.

CONNECT TO NETWORKS AND DEVICES

Your phone can connect to a variety of networks and devices, including Wi-Fi, GPRS, Bluetooth, devices, such as headsets. You can also transfer files to/from your PC through the data cable.

Slidiniet: ātri pārslidiniet pirkstu pāri ekrāna virsmai (neizvēloties vienību).

Piemēram, ritiniet ekrāna saturu uz augšu vai leju, lai apskatītu sarakstu.

Pieskarieties divreiz: ātri noklikšķiniet uz mājaslapas, kartes vai cita ekrāna, lai to pietuvinātu. Piemēram, divreiz noklikšķiniet uz mājaslapas pārūkprogrammā, lai izvēlēto sadaļu pieliecinātu ekrāna izmērā. Varat arī pieskarties divreiz, lai kontrolētu kameras pietuvinājumu, kartes un citas aplikācijas.

Savilkšana: dažās aplikācijās iespējams pietuvināt un attālināt, novietojot uz ekrāna reizē divus pirkstus un velkot tos kopā (lai attālinātu) vai projām vienu no otra (lai pietuvinātu).

Ekrāna rotācija: ekrāna novietojums mainās, kad to pagriežat. Šo funkciju iespējams ieslēgt un izslēgt.

TELEFONA TAUSTIŅU IZMANTOŠANA

Skārienjūtīgajiem taustiņiem telefona apakšējā daļā ir piesaistītas sekojošas funkcijas.

Izvēlnes taustiņš: Nospiežot atver izvēlni, kas saistīta ar konkrētāji brīdī izmantoto aplikāciju vai lietotni.

Mājas taustiņš: Nospiežot atver sākuma ekrānu. Nospiežot un pieturot - atver nesen izmantotās aplikācijas.

Atpakaļ: Nospiežot atgriez iepriekšējā ekrānā.

SAVIEŅOJUMI AR TĪKLIEM UN CITĀM IEKĀRTĀM

Telefons var savienoties ar dažādiem tīkliem un iekārtām, ieskaitot Wi-Fi, GPRS, Bluetooth ierīcēm (piemēram bezvadu austiņām), mobilo datu apraidei. Tāpat ir iespējams pārsūtīt dokumentus vai failus no/uz datoru, izmantojot datu kabeli.

Slankioti: greitai slankiokite pirštu per ekrano paviršij (neīsrīnkdamī jokiio elemento).

Pavyzdziui, perkalkite ekrana aukštyn arba žemyn, kad peržiūrētumėte siūlomą sąrašą.

Prisiliesti du kartus: greitai spustelėkite tam tikrą svetainę, žemėlapij ar kitą ekrana, kad priartinumėte . Pavyzdžiui, dukart spustelėkite naršyklėje svetainę, kad pasirinkti skryių padidintumėte iki ekrano dydžio. Taip pat galite dukart prisiliesti, kad kontroluotumėte kameros priartinimą, žemėlapius ar kitas aplikacijas.

Suspausti: kai kurias aplikacijas galima priartinti ir nutolinti, prisiliečiant prie ekrano vienu metu dviem pirštais bei suspaudžiant juos kartu (kad nutolintumėte) arba praskėčiant (kad priartinumėte) .

Ekrano sukimasis: dauguma ekrany pakeičia padėtį juos pasukus, kai pasukite juos. Šiā funkcijā galima ijungti ar išjungti.

TELEFONO MYGTUKŲ NAUDOJIMAS

Išoriniai ir jutikliniai telefono mygtukai skirti pasinaudoti telefono funkcijomis.

Menu klavišas. Paspaudus: atsidaro kontekstinis meniu, susijęs su tam tikru laiku naudojama aplikacija ar ekranu.

Pagrindinis mygtukas. Paspaudus: atsidaro pagrindinis ekranas. Paspaukite ir laikykite nuspauėdė: atsidaro neseniai naudotos aplikacijos.

Mygtukas „Atgal“: atsidaro ankstesnis ekranas, su kuruo dirbote.

PRIJUNGIMAS PRIE TINKLO IR KITŲ ĮRENGINIŲ

Jūsų telefonas gali būti prijungtas prie įvairių tinklų ir prietaisų duomenis, įskaitant belaidžius įrenginius Wi-Fi, GPRS, Bluetooth

Access to mobile data

To configure your Internet:

1. Go to [Settings]-[Wireless and Networks]-[More]-[Mobile Networks]-[Network settings]-[Access point names].
2. Select the access point depending on the service provider of your SIM card.
3. To change or check the mobile data access point names go to: [Settings]-[Wireless & Networks]-[More..]-[Mobile networks]-[APN].

By default, your network provider sends the access point name settings via SMS, or it comes with your SIM card. You may need to install these settings. After this, you can choose from the listed access point names. If the access point names are not listed by default, please contact your network provider for the same.

Access Internet via Wi-Fi

To browse the Internet via Wi-Fi:

1. Go to: [Settings]-[Wireless] then choose [Wi-Fi].
2. Next, select the Wi-Fi connection listed under Wi-Fi networks.

Pair With Bluetooth Devices

Go to: [Settings]-[Bluetooth] to turn it on. Your phone scans and displays the Bluetooth devices in range.

2. Tap Search for Devices. Also set Bluetooth preferences from here.

3. Touch the ID of the other device in the list in Settings to pair them. If you are prompted for a password, enter the password as suggested on the devices to be paired.

HEALTH AND SAFETY INFORMATION

SAR Compliance

Your phone is designed not to exceed the limits of emission of radio waves recommended by international guidelines.

SAR (specific absorption rate) is the measurement of body-absorbed RF quantity when the phone is in use. SAR value is ascertained according to the highest RF level generated during laboratory tests.

The SAR value of the phone may depend on factors such as proximity to the network tower, use of accessories or other accessories.

The highest SAR value of the device at the head and body are 0.295 W/kg and 0.632 W/kg respectively averaged over 10 gm of human tissue.

SAR Recommendations

Use a wireless hands-free system (headphone, headset) with a low power Bluetooth emitter.

Make sure the cell phone has a low SAR.

Please keep your calls short and use SMS whenever more convenient. This advice applies especially to children, adolescents and pregnant women.

Prefer to use your cell phone when the signal quality is good. People having active medical implants should preferably keep the cell phone at least 15 cm away from the implant.

Maintain a preferable distance of 15 mm from the device.

World Health Organization (WHO) Advice

Organizations such as the World Health Organization and the US Food and Drug Administration have stated that if people are concerned and want to reduce their exposure they could use a hands-free device to keep the phone away from the head and

body during phone calls, or reduce the amount of time spent on the phone.

TECHNICAL SPECIFICATIONS

BLASTER MINI|QUAD CORE 1.3GHZ|ANDROID 5.0

Device size: 133x65,5x9.4 mm

Weight (with battery): 135 g

SIM: 2 Micro-SIM, Dual Standby

4G band: LTE 1800/2600/800 MHz

3G band: HSDPA 900/2100 MHz

2G band: GSM 850/900/1800/1900 MHz

Chipset Platform: MT6732m

CPU: Quad-core 1.3GHz

GPU: MALIT760-MP2 500MHz

Operating system: Android V5.0 Lollipop

Display: 4.5" IPS 854*480px

Touch panel: 5 touch, Capacitive

Camera: 8MP AF (back) + 1.3MP (front)

Video: 1080p@30fps

Supports: GPRS, EDGE, WCDMA, LTE, GPS/A-GPS, FM

WLAN: Wi-Fi 802.11 b/g/n, Wi-Fi Direct, hotspot

Bluetooth: v4.0, A2DP, EDR

Sensors: Accelerometer, proximity, light

Internal memory: 1GB RAM + 8GB ROM

Memory card: microSD, up to 32GB

Battery: Li-ion 2000mAh, removable

Standby time: 2G up to 330 h, 3G/4G up to 300 h

Talk time: 2G up to 17 h, 3G up to 15 h

A/C adapter: 5V 1A

Headset: 3.5 mm

USB: MicroUSB v2.0

TEHNIKĀ SPECIFIKĀCIJA

BLASTER MINI|QUAD CORE 1.3GHZ|ANDROID 5.0

Telefona izmērs: 133x65,5x9.4 mm

Telefona svars ar bateriju: 135 g

SIM: 2 Micro-SIM, Dual Standby

4G tīkls: LTE 1800/2600/800 MHz

3G tīkls: HSDPA 900/2100 MHz

2G tīkls: GSM 850/900/1800/1900 MHz

Chipset Platform: MT6732m

CPU: Quad-core 1.3GHz

GPU: MALIT760-MP2 500MHz

Operētājsistēma: Android V5.0 Lollipop

Ekrāns: 4.5" IPS 854*480px

Skārienjūtīgs panelis: 5 touch, kapacitīvs

Kamera: 8MP AF (aizmugurējā) + 1.3MP (priekšējā)

Video: 1080p@30fps

Atbalsta: GPRS, EDGE, WCDMA, LTE, GPS/A-GPS, FM

WLAN: Wi-Fi 802.11 b/g/n, Wi-Fi Direct, hotspot

Bluetooth: v4.0, A2DP, EDR

Sensori: Paātrinājuma, tuvuma, gaismas

Iekšējā atmiņa: 1GB RAM + 8GB ROM

Atmiņas karte: microSD, līdz 32GB

Baterija: Li-ion 2000mAh, izņemama

Gaidīšanas režīms: 2G līdz 330 st, 3G/4G līdz 300 st

Sarunas režīms: 2G līdz 17 st, 3G līdz 15 st

A/C adapteris: 5V 1A

Brīvroku austiņas: 3.5 mm

Micro-USB: MicroUSB v2.0

TEHNIKĒ SPECIFIKĀCIJA

BLASTER MINI|QUAD CORE 1.3GHZ|ANDROID 5.0

Dydziai: 133x65,5x9.4 mm

Telefono svoris su baterija: 135 g

SIM: 2 Micro-SIM, Dual Standby

Tinklas 4G: LTE 1800/2600/800 MHz

Tinklas 3G: HSDPA 900/2100 MHz

Tinklas 2G: GSM 850/900/1800/1900 MHz

Chipset Platform: MT6732m

CPU: Quad-core 1.3GHz

GPU: MALIT760-MP2 500MHz

Operacijų sistemos: Android V5.0 Lollipop

Ekranas: 4.5" IPS 854*480px

Sensoriaus skydelis: 5 touch, Capacitive

Kamera/vaizdu įrašymas: 8MP AF (atgalinė) + 1.3MP (priekinis)

Video: 1080p@30fps

Palaiko: GPRS, EDGE, WCDMA, LTE, GPS/A-GPS, FM

WLAN: Wi-Fi 802.11 b/g/n, Wi-Fi Direct, hotspot

Bluetooth: v4.0, A2DP, EDR

Sensoriai: Pagreičio, artumo, šviesos

Vidinė atmintis: 1GB RAM + 8GB ROM

Atminties kortelės: microSD, iki 32GB

Baterija: Li-ion 2000mAh, nuimama

Budėjimo laikas: 2G iki 330 val., 3G/4G iki 300 val.

Pokalbio trukmė: 2G iki 17 val., 3G iki 15 val.


A/C adapteris: 5V 1A

Ausinės: 3.5 mm

Micro-USB: MicroUSB v2.0



TAVS MOBILAIS TĀLRUNIS

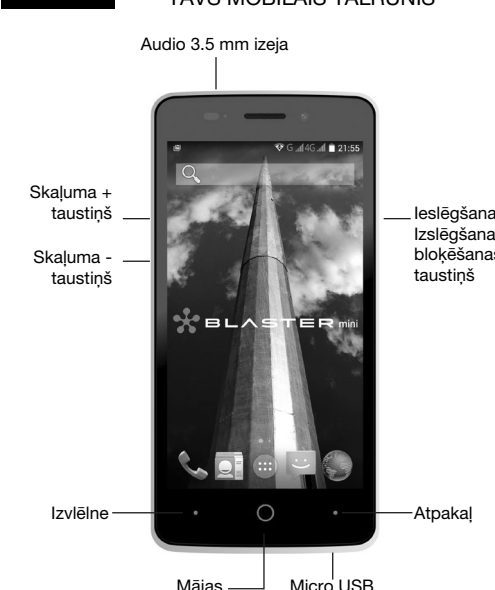

JŪSŪ MOBILUS TELEFONAS



ĮDĖKITE SIM KORTELEJ

Telefonas veikia su dviem SIM kortelėmis, t.y. gali priimti ir perduoti informaciją iš/i du skirtingus tinklus.

Kad įdėtumėte USIM/SIM kortelę (korteles):

1. Išjunkite mobilųjį telefoną, nuimkite galinį dangtelį ir išimkite bateriją.
2. Teisingai įdėkite USIM/SIM kortelę į jai skirtą vietą.
3. Įdėkite bateriją atgal ir uždėkite galinį dangtelį.
4. Naudojantis kortele USIM/SIM, įdėkite [Nustatymai]-[Beveilių ryšys ir tinklai]-[Gestione SIM].

ĮDĖKITE ATMIŅIŲS KORTELĒ

1. Išjunkite mobilųjį telefoną, nuimkite galinį dangtelį ir išimkite bateriją.

2. Įdėkite atminties kortelę į jai skirtą lizdą.

3. Įdėkite bateriją atgal ir uždėkite galinį dangtelį.

4. Naudodamiesi šiuo prietaisu, naudokite tik tinkamas, sertifikuotas EU, microSD/microSDHC atminties korteles. Netinkamos atminties kortelės gali pažeisti kortel arba prietaisą bei pažeisti kortelėje saugomus duomenis.

JUTIKLINIO EKRANO NAUDOJIMAS

Jūs galite naudoti jutiklinį ekrana šiais būdais:

Prisiliesti: veiksmas suaktyvina elementus ekrane, pavyzdžiui, aplikacijos ir nustatymų piktogramas, naudojamas, naudojamas, rašyti raides ir simbolius, suaktyvinti ir pasinaudoti ekrano klaviatūra bei mygtukais.

Prisiliesiti ir palaikyti: prisilieskite ir laikykite nuspauėdę elementą, kol vyksta tam tikras procesas.

Nutempti: prisilieskite ir laikykite nuspauėdę elementą, braukiant pirštą per ekraną, kol pasieksite tikslinę vietą.

